
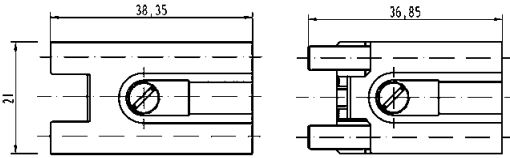

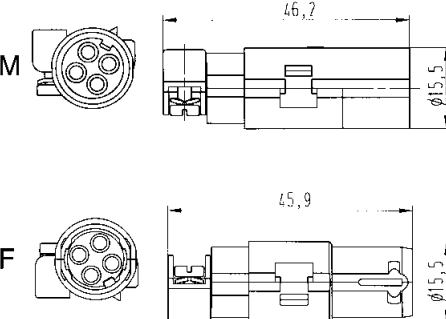


4 contacts + shielding
+ 2 power contacts
suitable in Han® 3 A metric
hoods and housings




Identification	Part number		Drawing	Dimensions in mm
	Male insert (M)	Female insert (F)		
Quintax insert 	09 15 003 3001	09 15 003 3101		
Quintax contacts Zinc alloy Order crimp contacts separately  Special clamp for cable diameter 3 - 6 and 6 - 9.5 mm included in delivery range	09 15 004 3013	09 15 004 3113		

Assembly instructions

Quintax-Z-contact

- Strip cable acc. to drawing 1 and fold the shielding over the cable.
- Crimp Han D® contacts onto the wires.

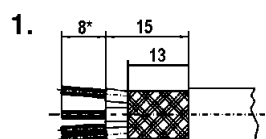

- Insert Han D® contacts into corresponding cavities of insulator until they are snapped in.
- Fit the insert including the cable into the opened shielded bushing. The coding pin of the shielded bushing has to meet the groove of the insulator.
- Clamp the tilt over the shielding onto the cable by means of the special clamp (small opening for cable diameter of 3 - 6 mm, large opening for cable diameter of 6 - 9.5 mm).
- Check the wiring.
- Close the shielded bushing with the cover and insert it into the corresponding cavity of the Quintax Module as usual.

